



**ASSAULT FRONT SHOCK**  
TECH LINE (218) 744-2107

**FRONT ASSAULT SHOCK AJUSTEMENTS:**

**Note:** The initial specs are 40 PSI and the Flex Piston position is at # 2, which would be standard. The limiter strap must be used with the ASSAULT SHOCK.

- 1. Adjusting the Flex Piston.** Move the snap ring in groove under the Flex Piston Ring to the desired position by using a Flat Screw Driver. Standard position is position #2; lower position will be softer (lighter, toward the rail). Moving it up would be stiffer (heavier).
- 2. The top valve on shock is for air pressure changes to the Air Bag.** Standard pressure is 40psi, 30-psi for a lighter set up and 60psi for a heavier set up.
- 3. NOTE: Do not remove the lower valve at any time. No adjustment is to be made this valve. This valve is for Nitrogen only at the time of shock rebuilding.**

